

How To Read Your Water Meter

Leak Detection: Turn off all taps in property, any movement of this dial indicates a leak has been detected.

Measures kilolitres (1000 litres); used to calculate usage by water authority

Measures every 100mls

Measures every 1 litre

Measures every 10 litres

Measures every 100 litres

Supports remote reading of via optional reed switch kit

Reliance Endurance Multijet Water Meter

Measures kilolitres (1000 litres); used to calculate usage by water authority

Measures every 100mls

Measures every 10 litres

Measures every 1 litre

Measures every 100 litres

Reliance Positive Displacement Water Meter